




1. Lay the Screen Housing on a flat surface. Holding the Side Bar, slowly uncoil the mesh until the Mesh Cylinder is visible.
2. Making certain that the Mesh is straight; begin by removing two small screws from the top of the Upper Housing Assembly.
Pull the Upper Housing Assembly out of the Screen Housing only enough so that it can rotate freely but still be in contact with the Spring in the Mesh Cylinder.
Charge the spring by rotating the entire Upper Housing Assembly 33 times counterclockwise.
Hold the Upper Housing Assembly firmly during the winding process as it will recoil rapidly if released.
Do not allow the Mesh Cylinder to turn during the winding process as this will limit access to the Locking Tab.
Once the spring is charged, lift the Locking Tab on the Mesh Cylinder, fully insert the Upper Housing Assembly into the Screen Housing, and fasten firmly with the two screws into the top of the unit.

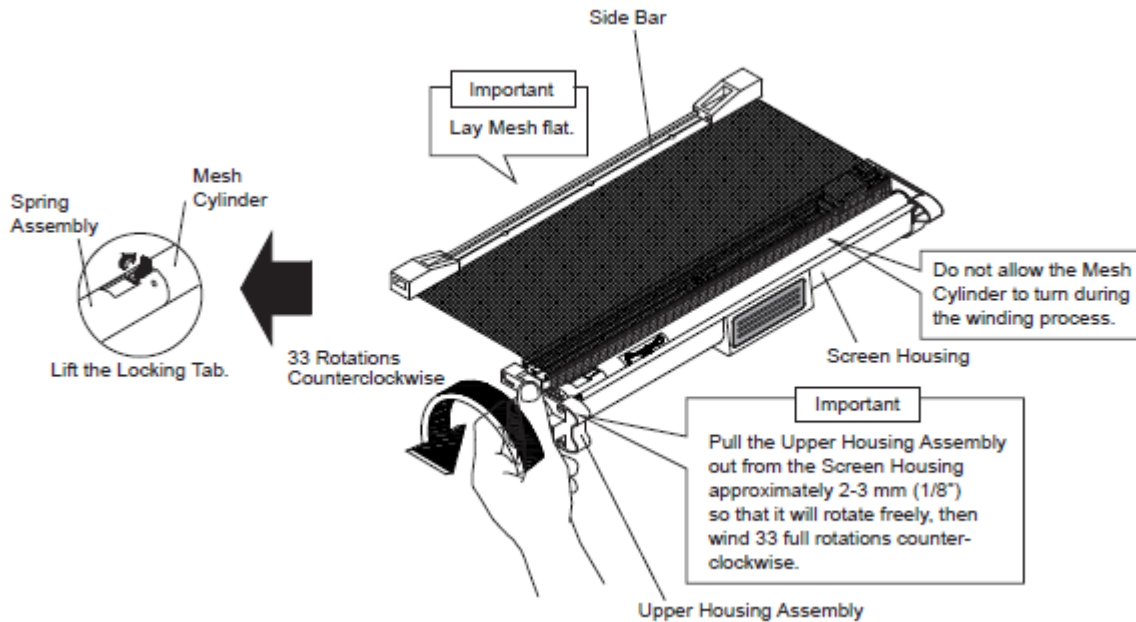

3. While holding the side bar, depress the Locking Tab, and allow the Screen Mesh to retract slowly into the Screen Housing. The Screen Housing is now ready for installation.

